

Zawory zwrotne

TYP ZAWORU	SYMBOL	PARAMETRY			
		D1 do zbiornika	D2 od sprężarki	D3 do odpężnika	D4 średnica rurki
 D1 D2 D3	ZAW DFL	1/2" Z	3/8" Z	1/8" Z	-
 D1 D2 D3	ZAW ZVA	1/2" Z	3/4" - 16 UNF	1/8" Z	-
 D1 D2 D3	ZZ 38Z-38Z P	3/8" Z	3/8" Z	1/8" W	-
	ZZ 12Z-38Z P	1/2" Z	3/8" Z	1/8" W	-
	ZZ 12Z-12Z P	1/2" Z	1/2" Z	1/8" W	-
	ZZ 34Z-12Z P	3/4" Z	1/2" Z	1/8" W	-
	ZZ 1Z-34Z P	1" Z	3/8" Z	1/8" W	-
 D1 D2 D3	ZZ 38W-38Z P	3/8" W	3/8" Z	1/8" W	-
	ZZ 38W- 12Z P	3/8" W	1/2" Z	1/8" W	-
	ZZ 12W-38Z P	1/2" W	3/8" Z	1/8" W	-
	ZZ 12W-12Z P	1/2" W	1/2" Z	1/8" W	-
	ZZ 34W-34Z P	3/8" W	3/8" Z	1/8" W	-
	ZZ 1W-1Z P	1" W	1" Z	1/8" W	-
 D1 D2 D3	ZZ 12W-D10	1/2" W	3/8" Z	1/8" W	10 mm
	ZZ 12W-D14	1/2" W	1/2" Z	1/8" W	14 mm
 D2 D1 D3	ZZ 12Z-38Z L	1/2" Z	3/8" Z	1/8" W	-
	ZZ 12Z-12Z L	1/2" Z	1/2" Z	1/8" W	-